 



**HOW TO ORDER**

**92B - XXX - XXX - (XX - DXXX - XXX)** SEE BELOW

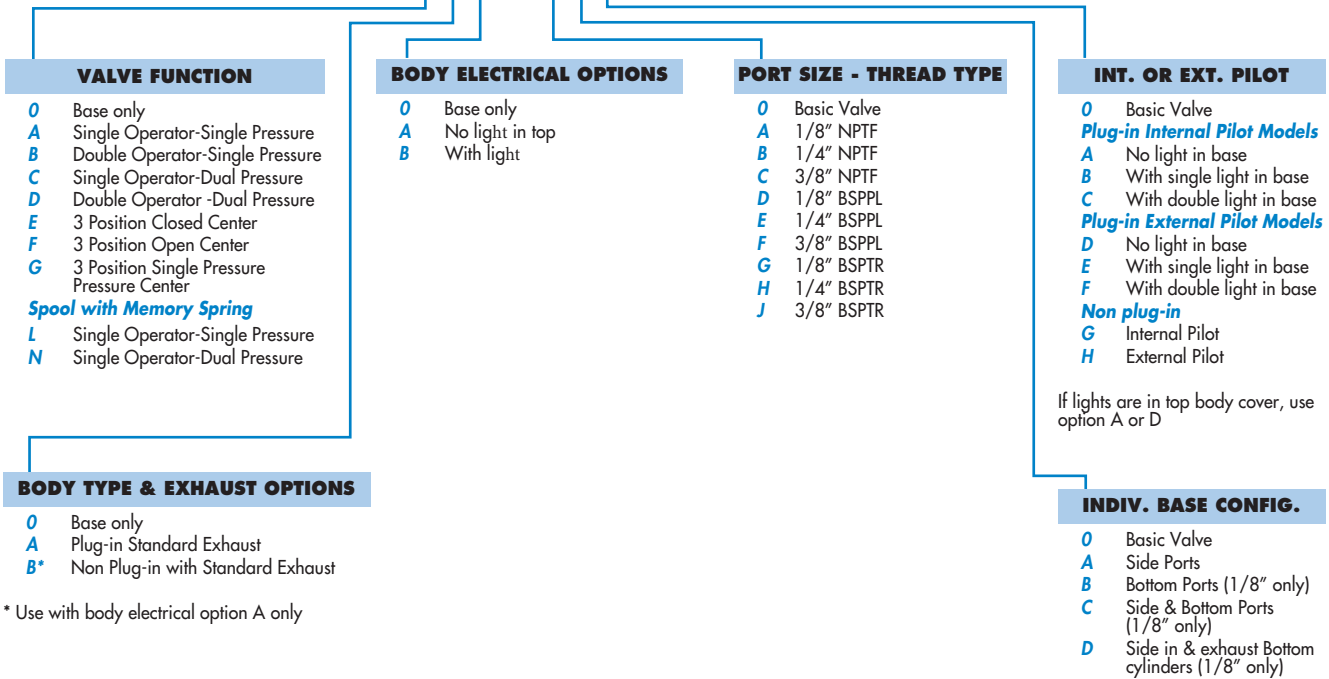

**PILOT VALVE OPTIONS**

 **XX - DXXX - XXX**

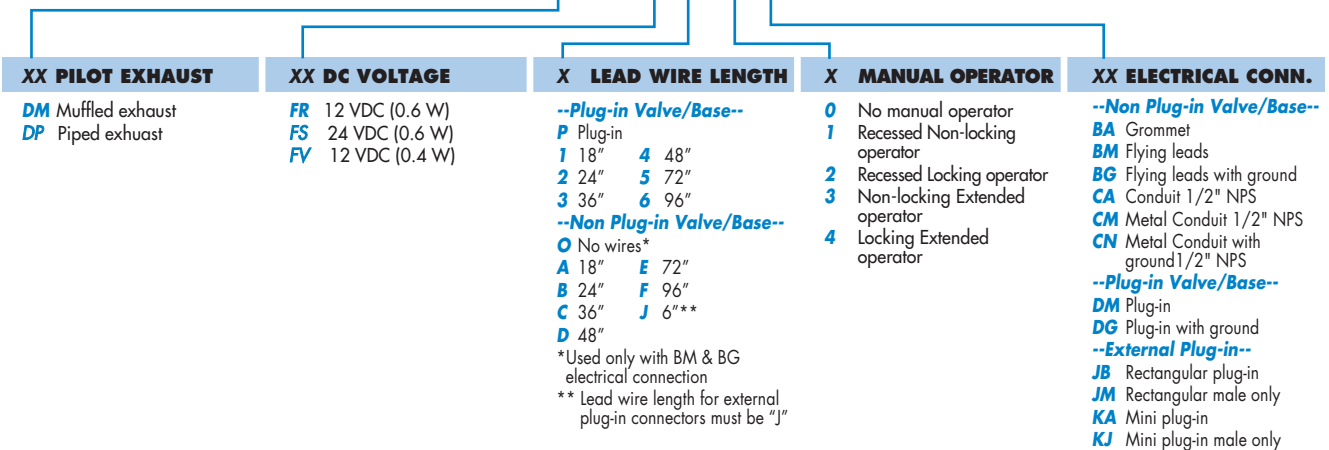

**HOW TO ORDER 92 SERIES FLOW CONTROL MODULE\***

FC 92C-AA	Plug-in flow control assembly single solenoid
FC 92C-BA	Plug-in flow control assembly double solenoid
FC 92C-CA	Non plug-in flow control assembly

\*If flow control module is to be installed between valve and base or valve and manifold at the factory, add -9 after the flow control model number, i.e., FC92C-AA-9. The flow control model number should follow the valve model number on which it is to be installed.

NOTE: If a flow control assembly is used with the dual pressure regulator option, only the flow control on the "B" end is functional. (Controls both cylinder ports.)  
NOTE: Consult the general catalog for regulator and circuit bar ordering information.